

# IOM

INSTALLATION OPERATION  
& MAINTENANCE

## A050

PLASTIC 1/2 INCH

AIR-OPERATED DOUBLE-DIAPHRAGM PUMP



FDA  
CE

**PSG**  
a **DOVER** company

 **ALL-FLO**

# TABLE OF CONTENTS

|            |                                               |       |
|------------|-----------------------------------------------|-------|
| SECTION 1  | WARNINGS, DANGERS AND CAUTIONS                | 3     |
| SECTION 2  | MODEL DESIGNATION MATRIX                      | 4     |
| SECTION 3  | PRINCIPLES OF OPERATION                       | 5     |
| SECTION 4  | DIMENSIONAL DRAWINGS                          | 6     |
| SECTION 5  | PERFORMANCE CURVE                             | 7     |
| SECTION 6  | INSTALLATION, TROUBLESHOOTING AND MAINTENANCE |       |
|            | INSTALLATION .....                            | 8-9   |
|            | TROUBLESHOOTING .....                         | 10    |
|            | OPERATION .....                               | 11    |
|            | MAINTENANCE .....                             | 11    |
| SECTION 7  | REPAIR AND ASSEMBLY                           |       |
|            | PUMP WET END REMOVAL.....                     | 12-13 |
|            | AIR VALVE REMOVAL .....                       | 14-15 |
|            | PILOT VALVE REMOVAL.....                      | 16-17 |
|            | TORQUE SPECIFICATIONS.....                    | 17    |
| SECTION 8  | EXPLODED VIEWS AND PARTS LISTS                | 18-20 |
| SECTION 9  | ELASTOMERS AND REPAIR KITS                    | 21    |
| SECTION 10 | WARRANTY AND REGISTRATION                     | 22    |

# CAUTIONS — READ FIRST!

READ THESE WARNINGS AND SAFETY PRECAUTIONS PRIOR TO INSTALLATION OR OPERATION. FAILURE TO COMPLY WITH THESE INSTRUCTIONS COULD RESULT IN PERSONAL INJURY AND OR PROPERTY DAMAGE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

**CAUTION** Always wear safety glasses when operating a pump to avoid eye injury. If diaphragm rupture occurs, material being pumped may be forced out of the air exhaust.

**CAUTION** Do not connect a compressed air source to the exhaust port of the pump.

**CAUTION** Do not lubricate air supply.

**CAUTION** Do not exceed 120 psig (8.3 bar) air-inlet pressure.

**CAUTION** Do not exceed 10 psig (0.7 bar) or 23 ft-H<sub>2</sub>O suction pressure.

**CAUTION** The temperature of the process fluid and air input must be no more than the maximum temperature allowed for the appropriate non-metallic material. See the list of temperatures below for each material's maximum recommended temperature:

|                   |                                 |
|-------------------|---------------------------------|
| Buna-N (Nitrile): | 10°F to 180°F (-12°C to 82°C)   |
| Geolast®:         | 10°F to 180°F (-12°C to 82°C)   |
| EPDM:             | -40°F to 280°F (-40°C to 138°C) |
| FKM:              | -40°F to 350°F (-40°C to 177°C) |
| Hytrel®:          | -20°F to 220°F (-29°C to 104°C) |
| Nylon:            | 0°F to 200°F (-18°C to 93°C)    |
| PTFE:             | 40°F to 220°F (4°C to 104°C)    |
| Polyethylene:     | 32°F to 158°F (0°C to 70°C)     |
| Polypropylene:    | 32°F to 180°F (0°C to 82°C)     |
| Polyurethane:     | 10°F to 150°F (-12°C to 66°C)   |
| PVDF:             | 0°F to 250°F (-18°C to 121°C)   |
| Santoprene®:      | -40°F to 225°F (-40°C to 107°C) |
| Urethane:         | -65°F to 220°F (-54°C to 104°C) |

Temperature limits are solely based upon mechanical stress and certain chemicals will reduce the maximum operating temperature. The allowable temperature range for the process fluid is determined by the materials in contact with the fluid being pumped. Consult a chemical resistance guide for chemical compatibility and a more precise safe temperature limit. Always use minimum air pressure when pumping at elevated temperatures.

**CAUTION** It is the end user's responsibility to maintain the process fluid's temperature during use.

**CAUTION** Ensure all wetted components are chemically compatible with the process fluid and the cleaning fluid.

**WARNING** = Hazards or unsafe practices which could result in severe personal injury, death or substantial property damage

**CAUTION** = Hazards or unsafe practices which could result in minor personal injury, product or property damage.

**WARNING** Prior to servicing the pump, ensure that the air and fluid lines are closed and disconnected. While wearing personal protective equipment, flush, drain and process liquid from the pump in a safe manner.

**WARNING** Maintenance must not be performed when a hazardous atmosphere is present.

**CAUTION** The equipment must be inspected for visible damage prior to use.

**CAUTION** Ensure pump is thoroughly cleaned and flushed prior to installation into a process line.

**CAUTION** Blow out all compressed air lines in order to remove any debris, prior to pump installation. Ensure that the muffler is properly installed prior to pump operation.

**CAUTION** Ensure air exhaust is piped to atmosphere prior to a submerged installation.

**CAUTION** Ensure all hardware is set to correct torque values prior to operation.

**WARNING** Pump, valves and all containers must be properly grounded prior to handling flammable fluids and/or whenever static electricity is a hazard.

**WARNING** This product can expose you to chemicals including Nickel, Chromium, Cadmium, or Cobalt, which are known to the State of California to cause cancer and/or birth defects or other reproductive harm. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

## MODEL DESIGNATION MATRIX & REPAIR KITS-BOLTED PLASTIC

| PRODUCT SERIES | SIZE |   |   |  | FLUID CONNECTION TYPE | AIR SECTION |   |  | LIQUID SECTION | DIAPHRAGM | VALVE/BALL | VALVE SEAT | O-RINGS | SPECIAL (PORTING) |   |    | SPECIAL (HARDWARE, MUFFLER) | SPECIAL (OTHER) |
|----------------|------|---|---|--|-----------------------|-------------|---|--|----------------|-----------|------------|------------|---------|-------------------|---|----|-----------------------------|-----------------|
| A              | 0    | 5 | 0 |  | 1                     | 2           | 3 |  | 4              | 5         | 6          | 7          |         | 8                 | 9 | 10 |                             |                 |

### 1 FLUID CONNECTION TYPE

S = NPS (NPT/BSP)  
 2 = Dual Suction/Dual Discharge NPT & BSP Compatible  
 4 = Dual Suction/Single Discharge NPT & BSP Compatible  
 6 = Single Suction/Dual Discharge NPT & BSP Compatible

### 2 AIR SECTION

P = Polypropylene Intermediate-Pneumatic Shift

### 3 LIQUID SECTION

K = PVDF  
 P = Polypropylene  
 Y = Conductive Nylon

### 4 DIAPHRAGMS

G = Geolast®  
 S = Santoprene®  
 T = PTFE with Santoprene® Backup  
 V = FKM

### 5 VALVE/BALL

G = Geolast®  
 S = Santoprene®  
 T = PTFE  
 V = FKM  
 3 = Stainless Steel

### 6 VALVE SEAT

P = Polypropylene  
 K = PVDF  
 3 = Stainless Steel

### 7 O-RINGS

E = EPDM  
 N = Buna-N  
 T = PTFE  
 V = FKM

### 8 PORTING

S = Default (Suction Right/ Discharge Right)  
 T = Suction Right / Discharge Left  
 X = Suction Left / Discharge Right  
 Y = Suction Left / Discharge Left  
 A = Suction Center Front / Discharge Center Front  
 B = Suction Center Front / Discharge Center Rear  
 C = Suction Center Front / Discharge Top  
 D = Suction Center Front / Discharge Right  
 E = Suction Center Front / Discharge Left  
 F = Suction Center Rear / Discharge Center Front  
 G = Suction Center Rear / Discharge Center Rear  
 H = Suction Center Rear / Discharge Top  
 I = Suction Center Rear / Discharge Right  
 J = Suction Center Rear / Discharge Left  
 K = Suction Bottom / Discharge Center Front  
 L = Suction Bottom / Discharge Center Rear  
 M = Suction Bottom / Discharge Top  
 N = Suction Bottom / Discharge Right  
 O = Suction Bottom / Discharge Left  
 P = Suction Right / Discharge Center Front  
 Q = Suction Right / Discharge Center Rear  
 R = Suction Right / Discharge Top  
 U = Suction Left / Discharge Center Front  
 V = Suction Left / Discharge Center Rear  
 W = Suction Left / Discharge Top  
 4 = All Ports Open (Standard ports will be left un-plugged)  
 6 = Dual Suction End Ports / Dual Discharge End Ports  
 7 = All Ports on Pump Open - No Plugs Included

### 9 SPECIAL OPTION (HARDWARE, MUFFLER, LUG)

7 = Stainless Steel Hardware, Standard Muffler  
 8 = Stainless Steel Hardware, Premium Muffler  
 B = PTFE Coated Stainless Steel Hardware, Standard Muffler  
 C = PTFE Coated Stainless Steel Hardware, Premium Muffler  
 F = Stainless Steel Hardware, Standard Muffler, Grounding Lug Installed  
 G = Stainless Steel Hardware, Premium Muffler, Grounding Lug Installed  
 H = PTFE Coated Stainless Steel Hardware, Standard Muffler, Grounding Lug Installed  
 I = PTFE Coated Stainless Steel Hardware, Premium Muffler, Grounding Lug Installed  
 Note: Equipment must be grounded to achieve ATEX rating it is recommended to configure the pump with a grounding lug option for ATEX applications.

### 10 SPECIAL OPTION (OTHER)

0 = Standard  
 1 = Cycle Counter Valve  
 2 = Solenoid Adaptor Valve 110/50 Volt AC, 120/60 Volt AC, DIN 43650B Connector  
 3 = Solenoid Adaptor Valve 110/50 Volt AC, 120/60 Volt AC Explosion Proof  
 4 = Solenoid Adaptor Valve 220/50 Volt AC, 240/60 Volt AC, 12 Volt DC, DIN 43650B Connector  
 5 = Solenoid Adaptor Valve 220/50 Volt AC, 240/60 Volt AC, 12 Volt DC Explosion Proof  
 6 = Solenoid Adaptor Valve 220/50 Volt AC, 240/60 Volt AC, 125 Volt DC, DIN 43650B Connector  
 7 = Solenoid Adaptor Valve 220/50 Volt AC, 240/60 Volt AC, 125 Volt DC Explosion Proof  
 8 = Solenoid Adaptor Valve 24 Volt DC, DIN 43650B Connector  
 9 = Solenoid Adaptor Valve 24 Volt DC, Explosion Proof  
 A = Grease Free (No lubrication assembly)

## WET END REPAIR KIT

Wet end kits are available and consist of diaphragms, (back-up diaphragms if required), balls, seats and seat O-Rings. See matrix below.

| PRODUCT<br>SERIES | WET END<br>REPAIR KIT |   | PUMP SIZE |   | DIAPHRAGM | VALVE/BALL | VALVE SEAT | O-RINGS | MATERIAL |   |   |   |   |
|-------------------|-----------------------|---|-----------|---|-----------|------------|------------|---------|----------|---|---|---|---|
| A                 | W                     | E | -         | 0 | 5         | 0          | -          | 4       | 5        | 6 | 7 | - | P |

**Bold indicates recommended options**

**Bold indicates recommended options**


## AIR END REPAIR KIT

Air end repair kit contains pilot sleeve assembly and main air valve.

| PRODUCT SERIES | AIR END REPAIR KIT | PUMP SIZE | MATERIAL |
|----------------|--------------------|-----------|----------|
| A              | A                  | K         | P        |

# PRINCIPLES OF OPERATION


## HOW AN AIR OPERATED DOUBLE DIAPHRAGM PUMP WORKS

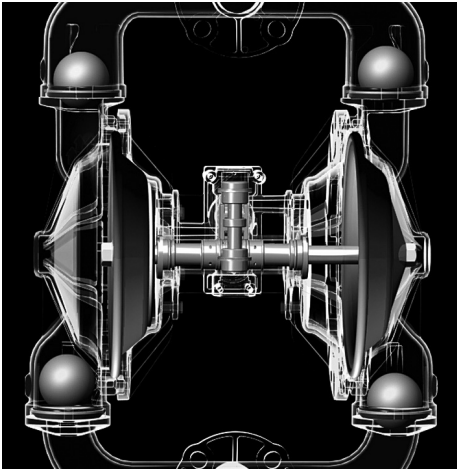

The air-valve directs pressurized air behind the diaphragm on the right, causing the diaphragm on the right to move outward (to the right).

Since both the right diaphragm and the left diaphragm are connected via a diaphragm rod, when the right diaphragm moves to the right, the left diaphragm (through the action of the diaphragm rod) moves to the right also.

When the diaphragm on the left side is moving to the right, it is referred to as suction stroke. When the left diaphragm is in its suction stroke, the left suction ball moves upward (opens) and the left discharge ball moves downward (closes). This action creates suction and draws liquid into the left side chamber.

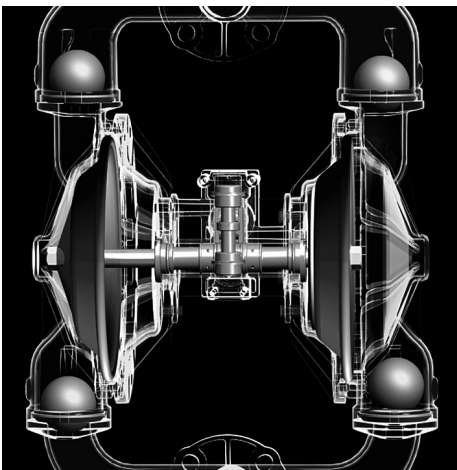

The air-valve directs pressurized air behind the left diaphragm, causing the left diaphragm to move outward (to the left).

Since both the left diaphragm and the right diaphragm are connected via a diaphragm rod, when the left diaphragm moves to the left, the right diaphragm (through the action of the diaphragm rod) moves to the left also.



When the diaphragm on the left side moves outward, the left discharge ball moves upward (opens) and the left suction ball moves downward (closes). This causes the liquid to leave the left side liquid outlet of the pump.

Simultaneously, the right diaphragm moves inward (to the left), which causes the right suction ball to open and the right discharge to close, which in turn causes suction, drawing liquid into the right chamber.

The process of alternating right suction / left discharge (and vice-versa) continues as long as compressed air is supplied to the pump.


# 1/2" PUMP DIMENSIONS

## BOLTED PLASTIC

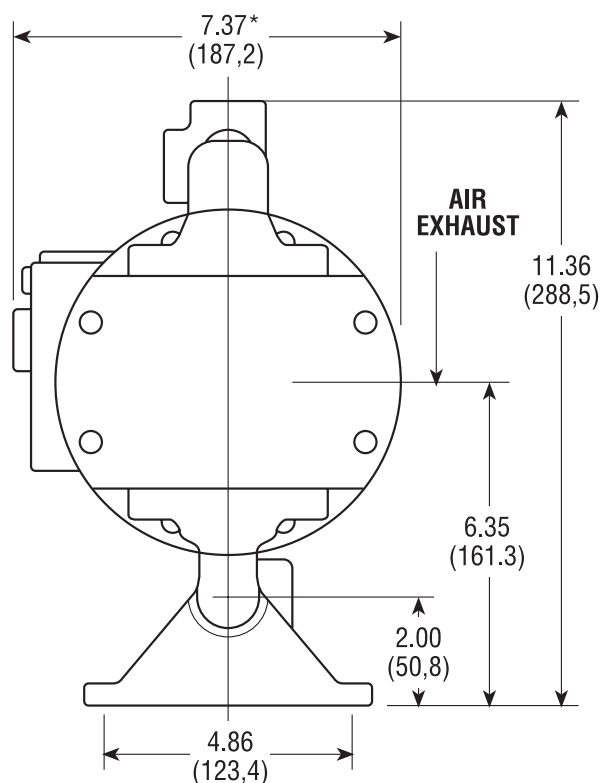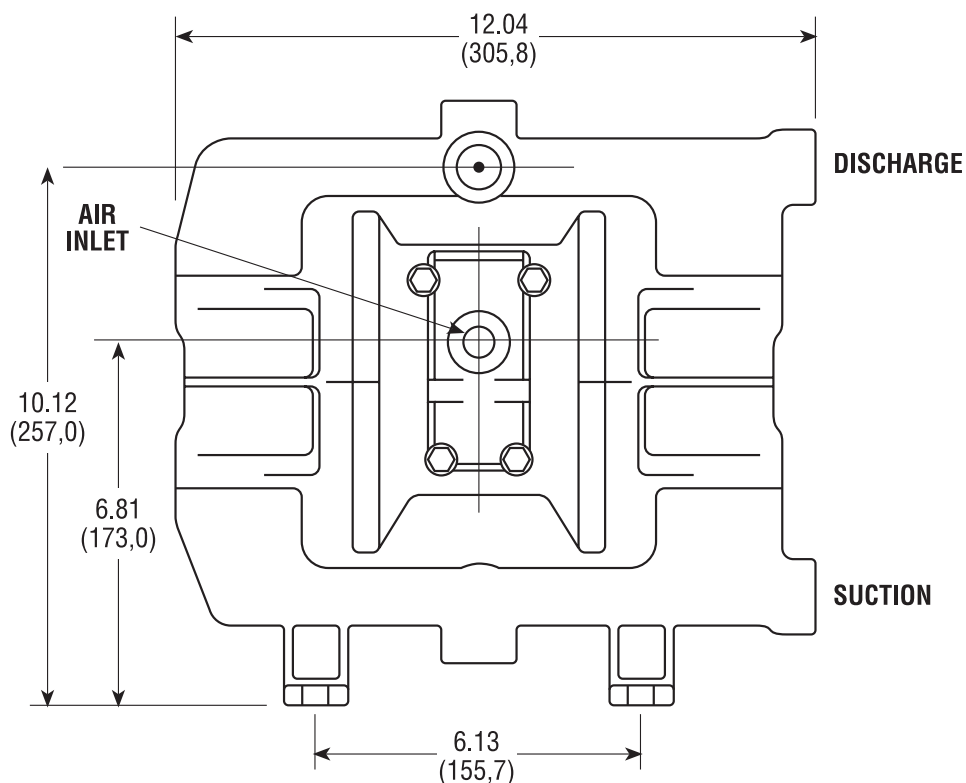

# PERFORMANCE CURVES

PERFORMANCE CURVE

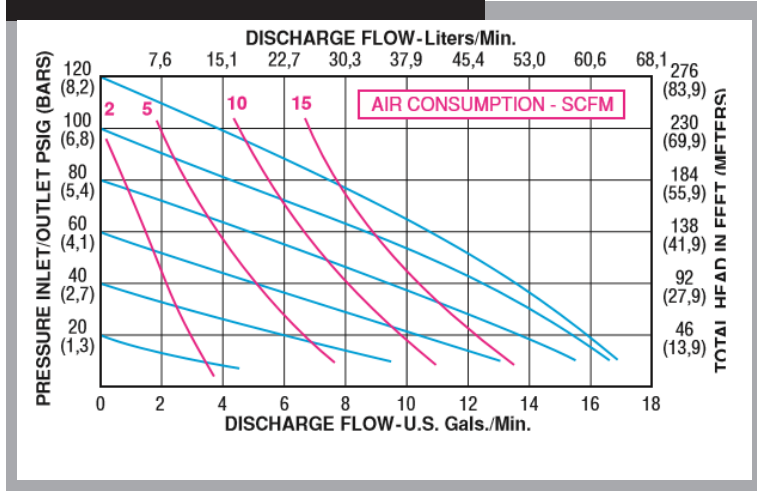

Performance Specifications

|                                |                                                 |
|--------------------------------|-------------------------------------------------|
| Max. Flow:                     | 17 gpm (64.4 lpm)                               |
| Max. Air Pressure:             | 120 psi (8.3 bar)                               |
| Max. Solids:                   | 1/8" (3.2 mm)                                   |
| Max. Suction Lift Dry:         | 15 ft-H <sub>2</sub> O (4.6 m-H <sub>2</sub> O) |
| Max. Suction Lift Dry w/PTFE:  | 10 ft-H <sub>2</sub> O (3.0 m-H <sub>2</sub> O) |
| Max. Suction Lift Wet:         | 26 ft-H <sub>2</sub> O (7.9 m-H <sub>2</sub> O) |
| Weight Polypropylene:          | 9 lbs (4.1 kg)                                  |
| Weight PVDF & Conductive Nylon | 12 lbs (5.4 kg)                                 |
| Air Inlet:                     | 1/4" FNPT                                       |
| Liquid Inlet FNPT/FBSPT:       | 1/2"                                            |
| Liquid Outlet FNPT/FBSPT:      | 1/2"                                            |
| Height:                        | 11.4" (289 mm)                                  |
| Width:                         | 12.0" (306 mm)                                  |
| Depth:                         | 7.4" (187 mm)                                   |

\*Flow rates indicated on the chart(s) shown were determined by pumping water at flooded suction. For optimum life and performance, pumps should be specified so that daily operation parameters will fall in the center of the pump performance curve.

# INSTALLATION, TROUBLESHOOTING AND MAINTENANCE

## INSTALLATION PIPING

Whenever possible ensure the pump is installed using the shortest possible pipe lengths with the minimum amount of pipe fittings. Ensure all piping is supported independent of the pump.

Suction and discharge piping should not be smaller than the connection size of the pump. When pumping liquids of high viscosity, larger piping may be used, in order to reduce frictional pipe loss.

Employ flexible hoses in order to eliminate the vibration caused by the pump. Mounting feet can also be used to reduce vibration effects.

All hoses should be reinforced, non-collapsible and be capable of high vacuum service. Ensure that all piping and hoses are chemically compatible with the process and cleaning fluid.

For processes where pulsation effects should be reduced, employ a pulsation dampener on the discharge side of the pump.

For self-priming applications, ensure all connections are airtight and the application is within the pumps dry-lift capability. Refer to product specifications for further details.

For flooded suction applications, install a gate valve on the suction piping in order to facilitate service.

For unattended flooded suction operation, it is recommended to pipe the exhaust air above the liquid source. In the event of a diaphragm failure this will reduce or eliminate the possibility of liquid discharging through the exhaust onto the ground.

## LOCATION

Ensure that the pump is installed in an accessible location, in order to facilitate future service and maintenance.

## AIR

Ensure that the air supply is sufficient for the volume of air required by the pump. Refer to product specifications for further details. For reliable operation, install a 5 micron air filter, air-valve and pressure regulator. Do not exceed the pumps maximum operating pressure of 120 psig.

## REMOTE OPERATION

Utilize a three way solenoid valve for remote operation. This ensures that air between the solenoid and the pump is allowed to “bleed off,” ensuring reliable operation. Liquid transfer volume is estimated by multiplying displacement per stroke times the number of strokes per minute

## NOISE

Correct installation of the muffler reduces sound levels. Refer to product specifications for further details.

## SUBMERGED OPERATION

For submersible operation, pipe the air exhaust to atmosphere


## GROUNDING THE PUMP

Loosen grounding screw and install a grounding wire. Tighten grounding screw. Wire size should be a 12 gauge wire or larger. Connect the other end of the wire to a true earth ground. Equipment must be grounded to achieve ATEX rating and it is recommended to configure the pump with a grounding lug option.





# SUGGESTED INSTALLATION

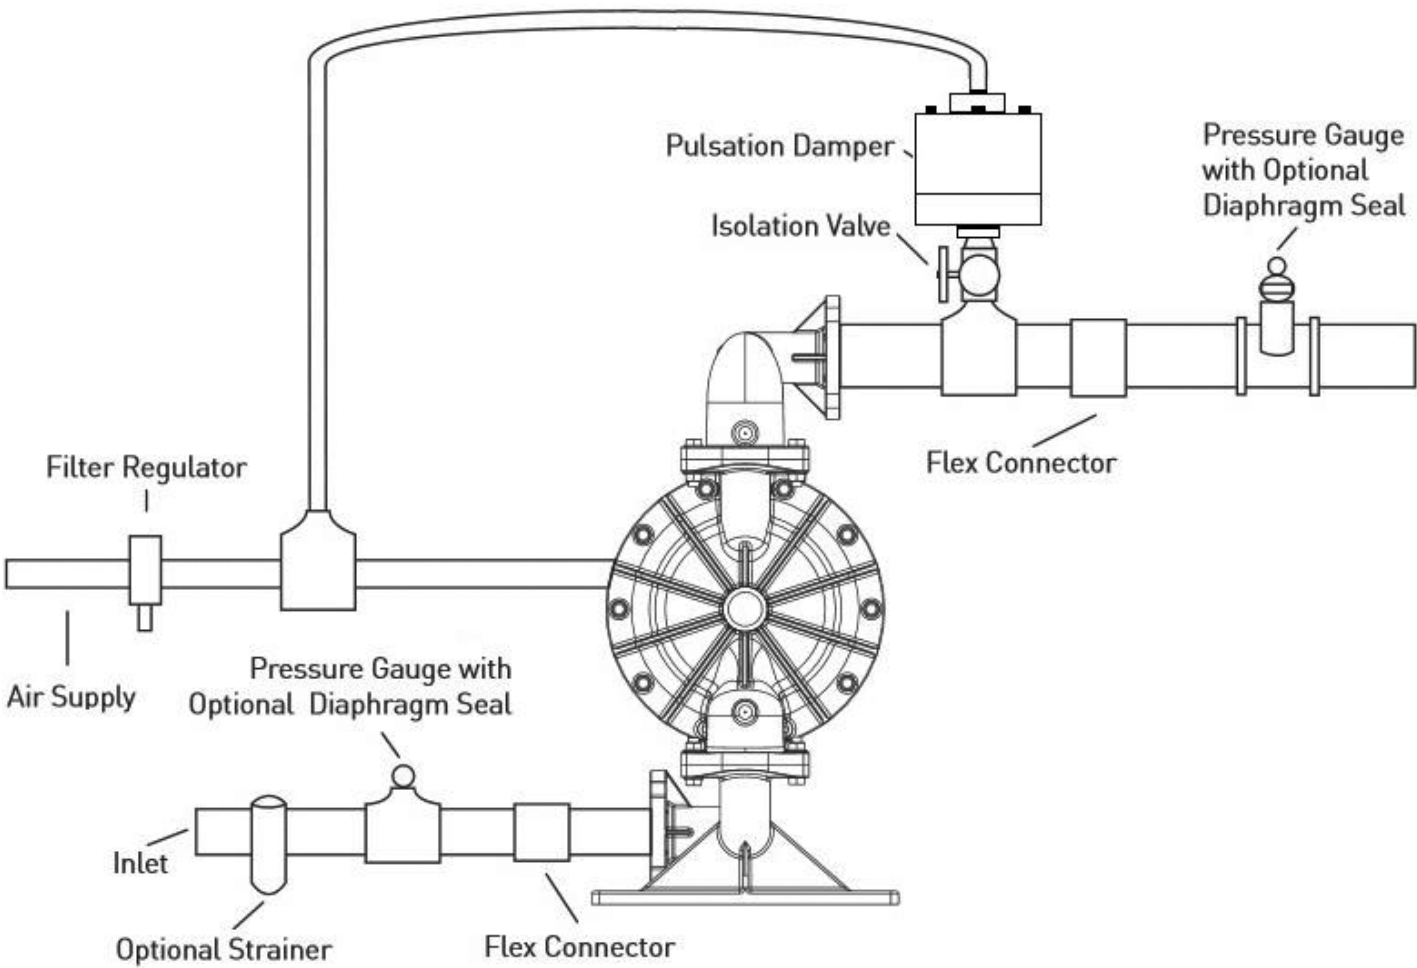

This illustration is a generic representation of an air operated double-diaphragm pump.

# TROUBLESHOOTING

## PROBLEM

## EFFECT/SOLUTION

### Pump Will Not Cycle

Discharge line closed or plugged  
 Discharge filter blocked  
 Check valve stuck  
 Air filter blocked  
 Air supply valve closed  
 Air supply hooked up to muffler side of pump  
 Compressor not producing air or turned off  
 Muffler iced or blinded  
 Diaphragm ruptured  
 Plant air supply line ruptured  
 Air valve wear/debris  
 Pilot sleeve wear/debris  
 Diaphragm rod broken  
 Diaphragm plate loose

### Pumped Fluid Coming Out of Muffler

Diaphragm ruptured  
 Diaphragm plate loose  
 Inlet liquid pressure excessive (above 10 psig)

### Pump Cycles but no Flow

Inlet strainer clogged  
 Suction valve closed  
 Suction line plugged  
 No liquid in the suction tank  
 Suction lift excessive  
 Debris stuck in valves  
 Excessive wear of check valves  
 Air leak on suction side with suction lift

### Pump Cycles with Closed Discharge Valve

Debris stuck in check valve  
 Excessive wear of check valves

### Pump Running Slowly/Not Steady

Air compressor undersized  
 Leak in air supply  
 Air-line, filter regulator or needle valve undersized  
 Muffler partially iced or blinded  
 Air valve gasket leak or misalignment  
 Air valve wear/debris  
 Pilot sleeve wear/debris  
 Liquid fluid filter blocked  
 Pump may be cavitating, reduce speed of operation  
 Suction strainer clogged

### Pump Will Not Prime

Air leak in suction pipe  
 Air leak in pump manifold connections  
 Suction strainer and lines clogged  
 Excessive lift conditions  
 Check valve wear  
 Debris in check valve

## OPERATION

The Air-Operated Double Diaphragm Pump requires a minimum of 20 psig of air to operate, with some variation according to diaphragm material. Increasing the air pressure results in a more rapid cycling of the pump and thus a higher liquid flow rate. In order to not exceed 120 psig of inlet air pressure, and for accurate control of the pump, it is suggested to use a pressure regulator on the air inlet.

An alternate means of controlling the flow-rate of the pump is to use an inlet air valve and partially open or close accordingly. When the air valve is completely in the closed position, the pump will cease to operate.

A third method of controlling the flow rate of the pump is to use a liquid discharge valve. Closing the liquid discharge valve will cause a decrease in the flow rate since the pump will operate against a higher discharge pressure.

Solenoid control of the inlet air may also be used in order to facilitate remote operation. A three way solenoid valve is recommended, in order to allow the air to “bleed off” between the solenoid and the pump.

Do not use valves for flow control on the suction side of the pump. (Closing or partially closing a liquid suction valve restrict the suction line and may cause damage to the diaphragms.) Suction strainers may be employed to reduce or eliminate larger solids, but routine maintenance is necessary in order to prevent a restriction on the suction.

## MAINTENANCE

Due to the unique nature of each application, periodic inspection of the pump is the best method to determine a proper maintenance schedule. A record should be kept of all repairs made to an installed pump. This will serve as the best predictor of future maintenance.

Typical maintenance involves replacing of “wear-parts” such as the diaphragms, balls, valve seats and O-rings. Proper maintenance can ensure trouble-free operation of the pump. Refer to repair and assembly instructions for further details.

 **WARNING** Maintenance must not be performed when a hazardous atmosphere is present.

## MAINTENANCE SCHEDULE

### WEEKLY (OR DAILY)

Make a visual check of the pump. If pumped fluid is leaking out of the pump, pipe fittings or muffler turn off pump and schedule maintenance.

### EVERY THREE MONTHS

Inspect fasteners and tighten any loose fasteners to recommended torque settings.

Schedule pump service based on pump’s service history.

# REPAIR AND ASSEMBLY

## PUMP WET END REMOVAL

### TOOLS NEEDED

- 1) One Wrench,  $\frac{7}{16}$  Inch
- 2) Two Wrenches,  $\frac{1}{2}$  Inch
- 3) Two Wrenches,  $\frac{7}{8}$  Inch


**⚠ WARNING** Prior to servicing the pump, ensure that the air and fluid lines are closed and disconnected. While wearing personal protective equipment, flush, drain and process liquid from the pump in a safe manner.

**⚠ WARNING** Maintenance must not be performed when a hazardous atmosphere is present.




#### STEP 1

Using the  $\frac{1}{2}$  inch wrenches remove four "Hex-Head Cap Screws" and four "Hex Flange Nuts" from the "Discharge Manifold".

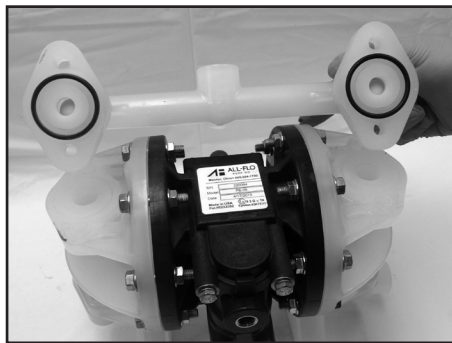


#### STEP 2

Remove the "Discharge Manifold".

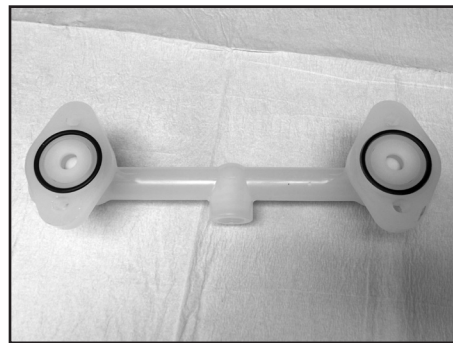


#### STEP 3

Remove the "O-Ring", "Valve Seat" and "Ball" from the "Discharge Manifold".

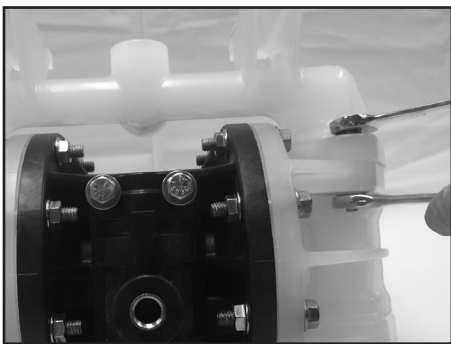


#### STEP 4

Using the  $\frac{1}{2}$  inch wrenches remove four "Hex-Head Cap Screws" and four "Hex Flange Nuts" from the "Suction Manifold".

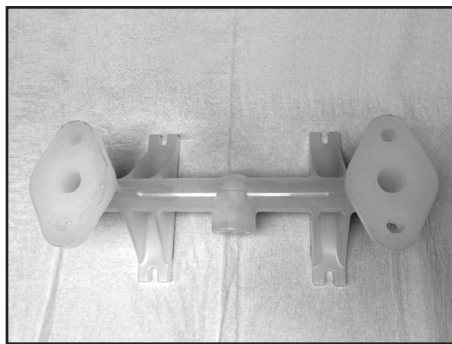

#### STEP 5

Remove the "Suction Manifold".

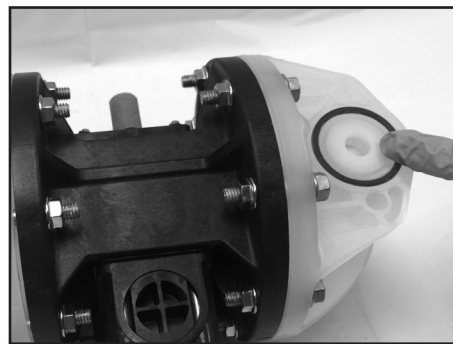


#### STEP 6

Remove the "O-Ring", "Valve Seat" and "Ball" from the "Outer Chambers".




### STEP 7

In order to remove both "Outer Chambers", using two  $\frac{1}{2}$  inch wrenches, remove eight "Hex Head Cap Screws" and eight "Hex Flange Nuts" from each side.

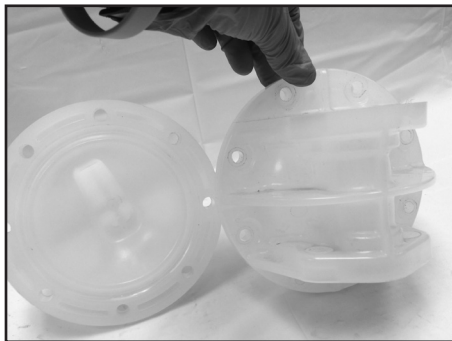


### STEP 8

Remove both "Outer Chambers" from the "Intermediate".

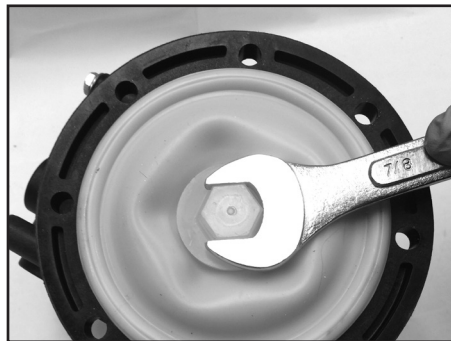


### STEP 9

Using two  $\frac{7}{8}$  Inch wrenches, remove "Outer Diaphragm Plate", "Diaphragm", "Inner Diaphragm Plate" and "Flat Washer" from one side of the pump.

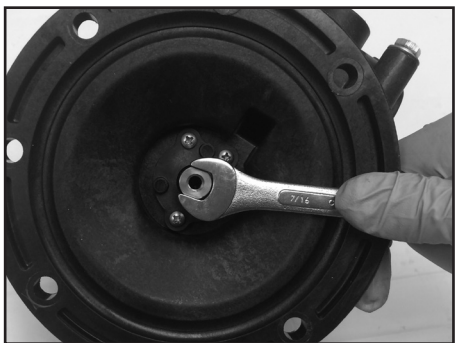

### STEP 10

Placing the  $\frac{7}{8}$  inch wrench on the remaining "Outer Diaphragm Plate" and the  $\frac{7}{16}$  inch wrench on the "Diaphragm Rod Assembly", remove the remaining "Outer Diaphragm Plate", "Diaphragm", "Inner Diaphragm Plate" and "Flat Washer" from the other side of the pump.

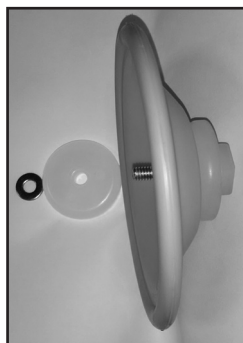

## PUMP WET END ASSEMBLY

To assemble the wet end of the pump, reverse the order of disassembly. Ensure all hardware is fastened in accordance with torque specifications (see page 17). Inverting one of the diaphragms during reassembly will facilitate ease of assembly.

Note: When using pumps built with PTFE O-Rings, always replace with new PTFE O-Rings, since the original O-Rings may not reseal the pump.



# REPAIR AND ASSEMBLY


## AIR VALVE REMOVAL

### TOOLS NEEDED

- 1) One Wrench,  $\frac{7}{16}$  Inch
- 2) One Pick, General Purpose
- 3) One Pair of Pliers

**⚠ WARNING** Prior to servicing the pump, ensure that the air and fluid lines are closed and disconnected. While wearing personal protective equipment, flush, drain and process liquid from the pump in a safe manner.

**⚠ WARNING** Maintenance must not be performed when a hazardous atmosphere is present.

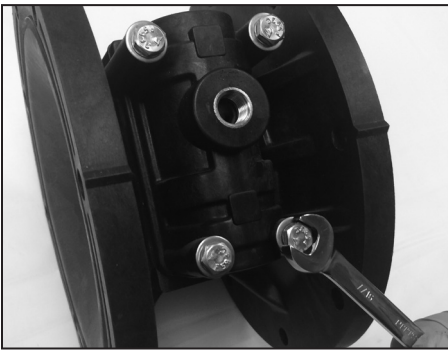



#### STEP 1

Using the  $\frac{7}{16}$  inch wrench, remove four "Hex Head Cap Screws", four "Lock Washers", four "Flat Washers" and four "Hex Nuts" (rear).



#### STEP 2

Remove the main "Air-Valve Assembly" from the pump.

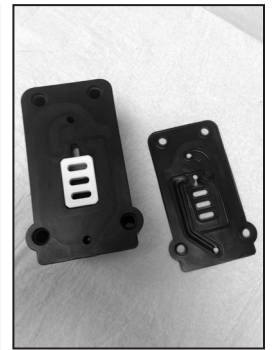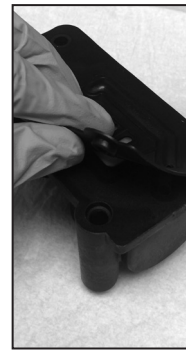

#### STEP 3

Remove the "Air-Valve Gasket" from the main "Air-Valve Assembly".



#### STEP 4

Remove the "Shuttle Plate" from the main "Air-Valve Assembly".

Note: The smooth shiny side of the shuttle plate should be toward the shuttle car.




#### STEP 5

Remove the "Shuttle" from the main "Air-Valve Assembly".



#### STEP 6

Using the pair of pliers, remove the "Air Valve End Plug" from the main "Air-Valve Assembly". Ensure the "O-Ring" is installed when reassembling.

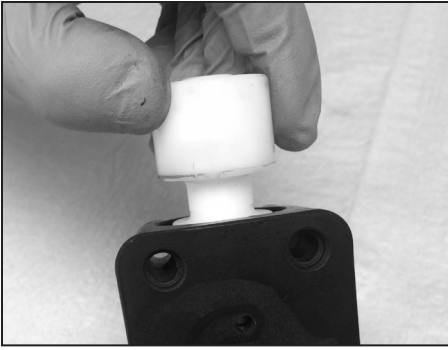

### STEP 7

Remove the "Air Valve Spool" from the main "Air-Valve Assembly".

Note: The longer piston is on the plug side.



### STEP 8

Using the pick, remove the "Lip Seal (Air Valve)" from the main "Air-Valve Assembly".



### STEP 9

Using the pick, remove the second "Lip Seal (Air Valve)" from the main "Air-Valve Assembly".

## AIR VALVE ASSEMBLY

To assemble the air valve, reverse the order of disassembly. During assembly, ensure that the open side of the lip-seals are both facing each other inward. Install the shuttle plate with the smooth/shiny side toward the shuttle car. Lubrication of the air valve assembly, with a non-synthetic lubricant, is recommended. Magna-Lube or Magna-Plate are recommended for assembly lubrication (see detailed parts list for ordering information).

Note that if the lip-seals are installed incorrectly, they will be unable to rotate. Insert the spool, larger chamfer side first, the spool's longer piston is to be on the plug side, ensure O-Ring is installed, and then the air-valve end plug into position.

# REPAIR AND ASSEMBLY


## PILOT VALVE REMOVAL

### TOOLS NEEDED

- 1) One Screwdriver, Phillips #2
- 2) Two Wrenches, 7/16 Inch

**⚠ WARNING** Prior to servicing the pump, ensure that the air and fluid lines are closed and disconnected. While wearing personal protective equipment, flush, drain and process liquid from the pump in a safe manner.

**⚠ WARNING** Maintenance must not be performed when a hazardous atmosphere is present.

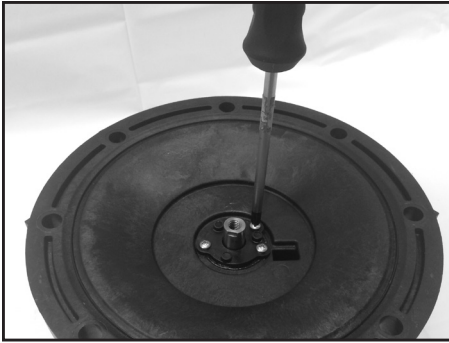


#### STEP 1

Using the screwdriver, remove three "Phillips Pan-Head Screws" in order to remove the "Retaining Plate". Repeat for other side of the pump.



#### STEP 2

Remove the "Diaphragm Rod" and the "Pilot Sleeve Assembly" from the "Intermediate".

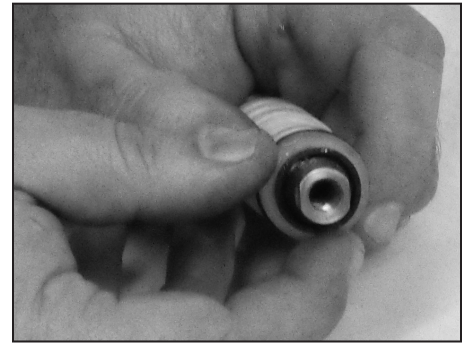

#### STEP 3

Remove both "Lip Seals (Diaphragm Rod)" and both "End Spacers (Pilot Sleeve)" from the "Pilot Sleeve Assembly". Remove both "O-Rings (End Spacer)" from both "End Spacers (Pilot Sleeve)".



#### STEP 4

Remove three "Inner Spacers (Pilot Sleeve)" and four "O-Rings (Pilot Sleeve)" from the "Pilot Sleeve Assembly".



#### STEP 5

Using two 7/16 inch wrenches, disassemble the "Diaphragm Rod Assembly" into its two parts.  
Note: They are installed with thread locker.



#### STEP 6

Remove the "Pilot Sleeve" from the disassembled "Diaphragm Rod Assembly".



# PILOT VALVE ASSEMBLY

To assemble the pilot valve, reverse the order of disassembly. Should process fluid have contact with the pilot valve O-Rings, they should be replaced as swelling may occur and cause irregular operation. During assembly, ensure that the open side of the lip-seals are facing outward. Lubrication of the pilot sleeve assembly, with a non-synthetic lubricant, is recommended in order to facilitate re-assembly into the intermediate. Magna-Lube or Magna-Plate are recommended for assembly lubrication [see detailed parts list for ordering information].

## TORQUE SPECIFICATION CHART

### RECOMMENDED TORQUE SPECIFICATIONS


| 1/2" Pumps       |                             |
|------------------|-----------------------------|
| Manifold Bolts   | 85-90 in-lbs (9.6-10.2 N-m) |
| Chamber Bolts    | 50 in-lbs (5.6 N-m)         |
| Air Valve Bolts  | 40 in-lbs (4.52 N-m)        |
| Diaphragm Plates | 70 in-lbs (7.9 N-m)         |

Note: Always torque the chamber bolts prior to the manifold bolts. When reassembling, loosely tighten all external fasteners adjusting and aligning gradually, in an alternating fashion, tighten to torque requirements listed above.

Note: When using pumps built with PTFE O-Rings, always replace with new PTFE O-Rings, since the original O-Rings may not reseal the pump.

# EXPLODED VIEW & PARTS LIST

A050-SP\*-\*\*\*\*-\*\*\* BOLTED PLASTIC

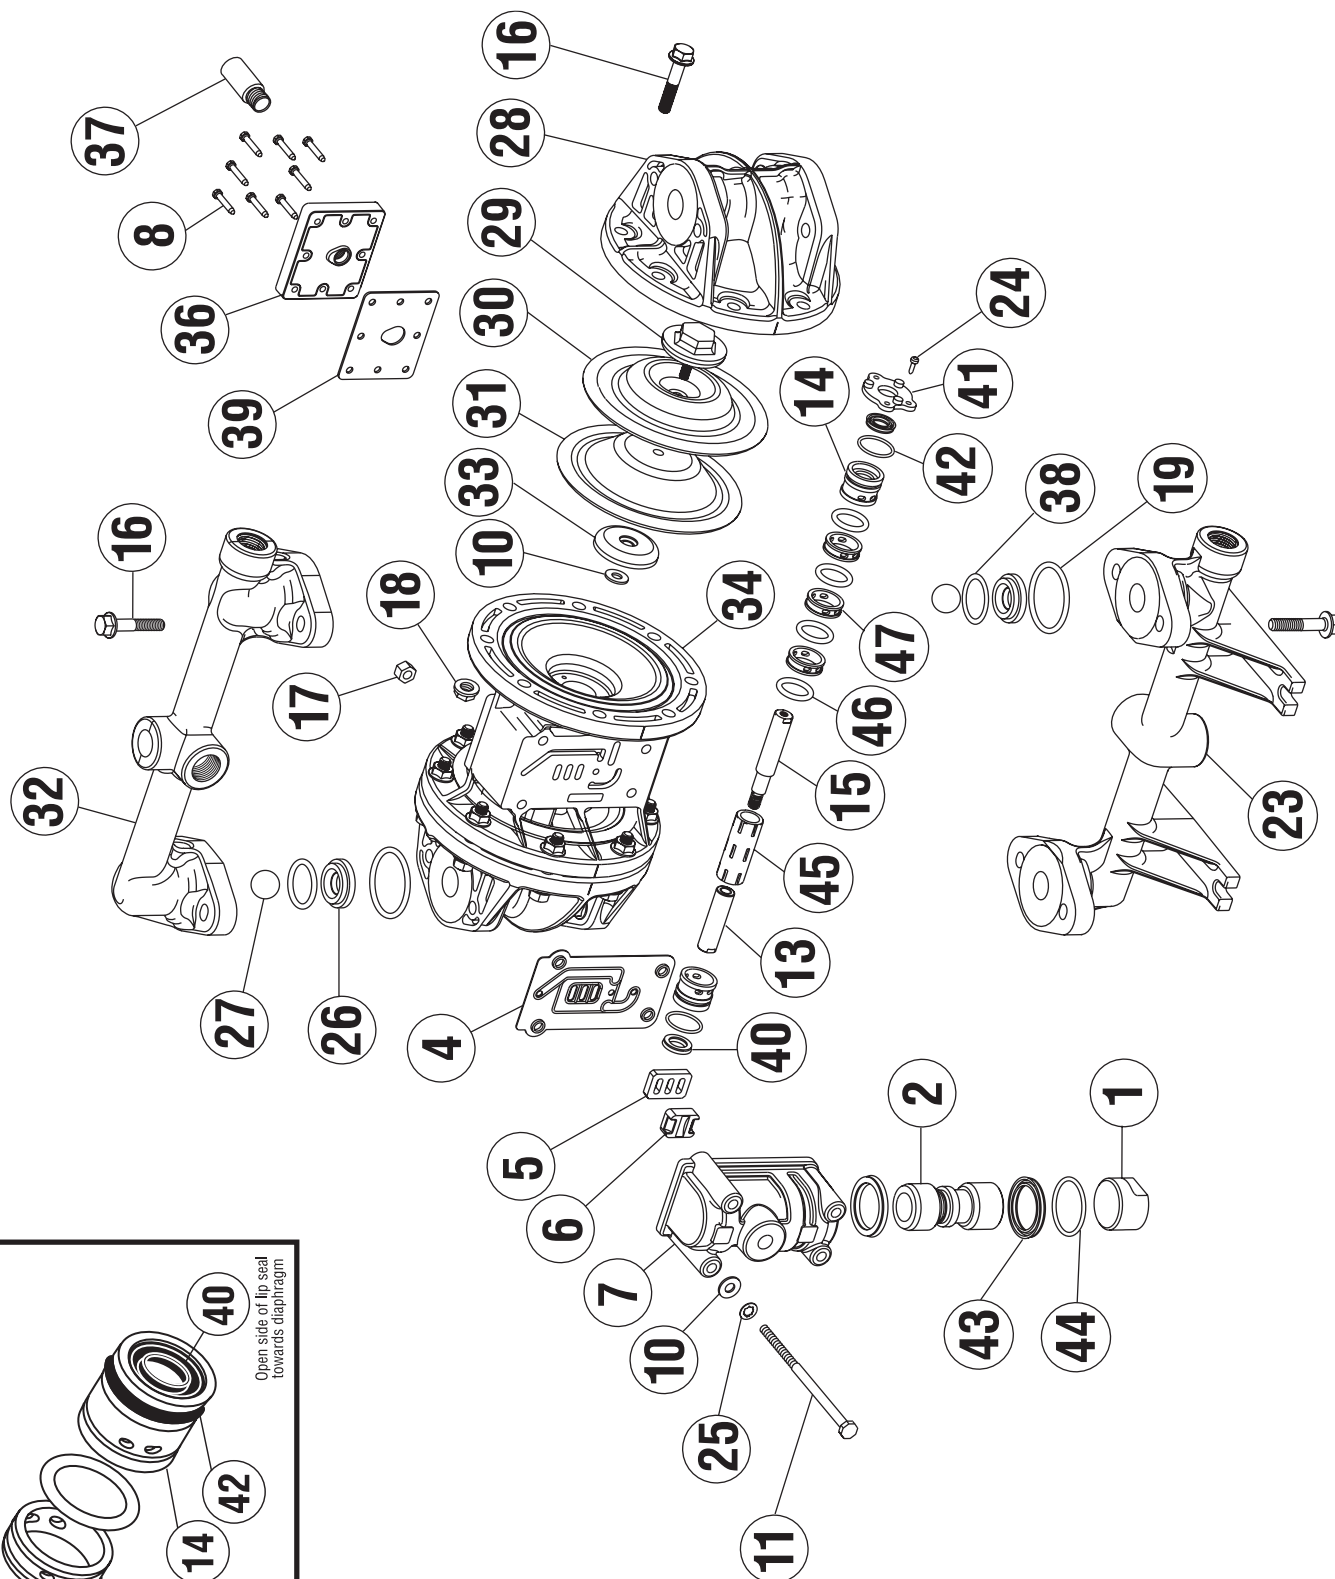

# PARTS LIST - BOLTED PLASTIC

## A050-SP\*-\*\*\*\*-\*\*\*

| ITEM | DESCRIPTION                | QTY | PUMP MODEL                                                                                       | PART NO.                                                           | MATERIAL                                                  |
|------|----------------------------|-----|--------------------------------------------------------------------------------------------------|--------------------------------------------------------------------|-----------------------------------------------------------|
| 1    | AIR VALVE END PLUG         | 1   | ALL MODELS                                                                                       | 11703-60                                                           | Polypropylene                                             |
| 2    | AIR VALVE SPOOL            | 1   | ALL MODELS                                                                                       | 10480-31                                                           | Acetal                                                    |
| 4    | AIR VALVE GASKET           | 1   | ALL MODELS                                                                                       | 12116-19                                                           | Nitrile                                                   |
| 5    | SHUTTLE PLATE              | 1   | ALL MODELS                                                                                       | 10416-77                                                           | Ceramic                                                   |
| 6    | SHUTTLE                    | 1   | ALL MODELS                                                                                       | 10415-00                                                           | Special                                                   |
| 7    | AIR VALVE BODY             | 1   | ALL MODELS                                                                                       | 11614-60                                                           | Polypropylene                                             |
| 8    | SLT WSHD SCREW (#8 X 1")   | 8   | ALL MODELS (NON-PTFE COATED)                                                                     | 12525-26                                                           | Stainless Steel                                           |
| 10   | FLAT WASHER (1/4")         | 6   | ALL MODELS (NON-PTFE COATED)                                                                     | 12300-26                                                           | Stainless Steel                                           |
| 11   | CAP SCREW (1/4" X 4-1/2")  | 4   | ALL MODELS (NON-PTFE COATED)                                                                     | 12513-26                                                           | Stainless Steel                                           |
| 13   | DIAPHRAGM ROD (Short)      | 1   | ALL MODELS                                                                                       | *SEE NOTE                                                          | Stainless Steel                                           |
| 14   | END SPACER (Pilot Sleeve)  | 2   | ALL MODELS                                                                                       | 10204-40                                                           | Polypropylene                                             |
| 15   | DIAPHRAGM ROD (Long)       | 1   | ALL MODELS                                                                                       | *SEE NOTE                                                          | Stainless Steel                                           |
| 16   | FLNG BOLT (5/16" X 1-5/8") | 24  | ALL MODELS (NON-PTFE COATED)                                                                     | 12539-26                                                           | Stainless Steel                                           |
| 17   | HEX NUT (1/4" - 20)        | 4   | ALL MODELS (NON-PTFE COATED)                                                                     | 12600-26                                                           | Stainless Steel                                           |
| 18   | FLNG HEX NUT (5/16" - 18)  | 24  | ALL MODELS (NON-PTFE COATED)                                                                     | 12608-26                                                           | Stainless Steel                                           |
| 19   | O-RING (Manifolds)         | 4   | A050-SP*-***N-***<br>A050-SP*-***V-***<br>A050-SP*-***E-***<br>A050-SP*-***T-***                 | 11936-11 †<br>11936-13 †<br>11936-15 †<br>11936-17 †               | Nitrile<br>FKM<br>EPDM<br>PTFE                            |
| 23   | SUCTION MANIFOLD           | 1   | A050-SPP-****-***<br>A050-SPY-****-***<br>A050-SPK-****-***                                      | 10553-40<br>10553-46<br>10553-56                                   | Polypropylene<br>Conductive Nylon<br>PVDF                 |
| 24   | SELF TAP SCREW (#6 X 1/2") | 6   | ALL MODELS                                                                                       | 12510-26                                                           | Stainless Steel                                           |
| 25   | LOCK WASHER (1/4")         | 4   | ALL MODELS (NON-PTFE COATED)                                                                     | 12350-26                                                           | Stainless Steel                                           |
| 26   | VALVE SEAT                 | 4   | A050-SP*-**3*-***<br>A050-SP*-**P*-***<br>A050-SP*-**K*-***                                      | 10906-26 †<br>10906-40 †<br>10906-56 †                             | Stainless Steel<br>Polypropylene<br>PVDF                  |
| 27   | BALL                       | 4   | A050-SP*-*V*-***<br>A050-SP*-*G*-***<br>A050-SP*-*S*-***<br>A050-SP*-*3*-***<br>A050-SP*-*T*-*** | 11000-13 †<br>11000-19 †<br>11000-23 †<br>11000-26 †<br>11000-45 † | FKM<br>Geolast®<br>Santoprene®<br>Stainless Steel<br>PTFE |
| 28   | OUTER CHAMBER              | 2   | A050-SPP-****-***<br>A050-SPY-****-***<br>A050-SPK-****-***                                      | 10720-40<br>10720-46<br>10720-56                                   | Polypropylene<br>Conductive Nylon<br>PVDF                 |
| 29   | OUTER DIAPHRAGM PLATE      | 2   | A050-SPP-****-***<br>A050-SPY-****-***<br>A050-SPK-****-***                                      | 11200-40<br>11200-46<br>11200-56                                   | Polypropylene<br>Conductive Nylon<br>PVDF                 |
| 30   | OVERLAY (PTFE ONLY)        | 2   | A050-SP*-T***-***                                                                                | 11400-59 †                                                         | PTFE                                                      |
| 31   | DIAPHRAGM                  | 2   | A050-SP*-V***-***<br>A050-SP*-G***-***<br>A050-SP*-S***-***<br>A050-SP*-T***-***                 | 10600-13 †<br>10600-19 †<br>10600-23 †<br>10600-23 †               | FKM<br>Geolast®<br>Santoprene®<br>Santoprene®             |

# PARTS LIST - BOLTED PLASTIC

## A050-SP\*-\*\*\*\*-\*\*\*

| ITEM | DESCRIPTION                 | QTY | PUMP MODEL        | PART NO.    | MATERIAL         |
|------|-----------------------------|-----|-------------------|-------------|------------------|
| 32   | DISCHARGE MANIFOLD          | 1   | A050-SPP-****-*** | 10554-AF-40 | Polypropylene    |
|      |                             |     | A050-SPY-****-*** | 10554-AF-46 | Conductive Nylon |
|      |                             |     | A050-SPK-****-*** | 10554-AF-56 | PVDF             |
| 33   | INNER DIAPHRAGM PLATE       | 2   | A050-SPP-****-*** | 11100-40    | Polypropylene    |
|      |                             |     | A050-SPY-****-*** | 11100-46    | Conductive Nylon |
|      |                             |     | A050-SPK-****-*** | 11100-56    | PVDF             |
| 34   | INTERMEDIATE                | 1   | ALL MODELS        | 11521-60    | Polypropylene    |
| 36   | MUFFLER PLATE               | 1   | ALL MODELS        | 13111-60    | Polypropylene    |
| 37   | MUFFLER                     | 1   | ALL MODELS        | 13008-00    | Polypropylene    |
| 38   | O-RING (Valve Seat)         | 4   | A050-SP*-***N-*** | 11937-11 †  | Nitrile          |
|      |                             |     | A050-SP*-***V-*** | 11937-13 †  | FKM              |
|      |                             |     | A050-SP*-***E-*** | 11937-15 †  | EPDM             |
|      |                             |     | A050-SP*-***T-*** | 11937-17 †  | PTFE             |
| 39   | GASKET (Muffler Plate)      | 1   | ALL MODELS        | 12117-19    | Nitrile          |
| 40   | LIP SEAL (Diaphragm Rod)    | 2   | ALL MODELS        | 12000-76    | Nitrile          |
| 41   | RETAINING PLATE             | 2   | ALL MODELS        | 12708-54    | Nylon            |
| 42   | O-RING (End Spacer)         | 2   | ALL MODELS        | 11923-11    | Nitrile          |
| 43   | AIR VALVE LIP SEAL          | 2   | ALL MODELS        | 12003-76    | Nitrile          |
| 44   | O-RING (Valve End Plug)     | 1   | ALL MODELS        | 11913-11    | Nitrile          |
| 45   | PILOT SLEEVE                | 1   | ALL MODELS        | 10105-31    | Acetal           |
| 46   | O-RING (Pilot Sleeve)       | 4   | ALL MODELS        | 11920-16    | Urethane         |
| 47   | INNER SPACER (Pilot Sleeve) | 3   | ALL MODELS        | 10203-40    | Polypropylene    |

\* Any Character

\* NOTE: DIAPHRAGM ROD CAN ONLY BE PURCHASED AS AN ASSEMBLY.

|                                         |   |            |          |                 |
|-----------------------------------------|---|------------|----------|-----------------|
| DIAPHRAGM ROD ASSEMBLY<br>Items 13 & 15 | 1 | ALL MODELS | 33000-00 | Stainless Steel |
|-----------------------------------------|---|------------|----------|-----------------|

### OPTIONAL ASSEMBLIES AVAILABLE

|                                                           |   |            |                |         |
|-----------------------------------------------------------|---|------------|----------------|---------|
| MAIN AIR VALVE ASSEMBLY<br>Items 1, 2, 4, 5, 6, 7, 43, 44 | 1 | ALL MODELS | AMK-050-P      | Various |
| PILOT VALVE ASSEMBLY<br>Items 14, 40, 42, 45, 46, 47      | 1 | ALL MODELS | APK-050-P      | Various |
| PILOT SLEEVE ELASTOMER KIT<br>Items 14, 40, 42, 46, 47    | 1 | ALL MODELS | PEK-32000      | Various |
| † WET END ASSEMBLY<br>Items 19, 26, 27, 30, 31, 38        | 1 | ALL MODELS | AWE-050-****-P | Various |

# ELASTOMERS

## WETTED ELASTOMERS

### BUNA-N (NITRILE)

is a general purpose elastomer used with water and many oils. Temperature range 10°F to 180°F (-12°C to 82°C).

### GEOLAST®

is an injection molded thermoplastic material with characteristics similar to Nitrile. Has excellent abrasion resistance. Temperature range 10°F to 180°F (-12°C to 82°C).

### EPDM

is a general purpose elastomer with good resistance to many acids and bases. Temperature range -40°F to 280°F (-40°C to 138°C).

### SANTOPRENE®

is an injection molded material with characteristics similar to EPDM. Has excellent abrasion resistance. Temperature range -40°F to 225°F (-40°C to 107°C).

### FKM

is an elastomer with good corrosion resistance to a wide variety of chemicals. Temperature range -40°F to 350°F (-40°C to 177°C).

### PTFE (POLYTETRAFLUOROETHYLENE)

is a thermoplastic polymer that is inert to most chemicals. Temperature range 40°F to 220°F (4°C to 104°C).

Most of the above elastomers are available in FDA approved formulations.

Geolast® is a registered trademark of ExxonMobil Chemical Co.  
 Santoprene® is a registered trademark of ExxonMobil Chemical Co.  
 Hytrel® is a registered trademark of DuPont Performance Elastomers L.L.C.  
 Magnalube® is a registered trademark of Carleton-Stuart Corp.

# WARRANTY AND REGISTRATION

**WARRANTY.** All All-Flo products shall be covered by the standard All-Flo Limited Warranty in effect at the time of shipment. This warranty (which may be modified by All-Flo at any time) provides:

MATERIALS SOLD ARE WARRANTED TO THE ORIGINAL USER AGAINST DEFECTS IN WORKMANSHIP OR MATERIALS UNDER NORMAL USE (RENTAL USE EXCLUDED) FOR FIVE YEARS AFTER PURCHASE DATE. ANY PUMP WHICH IS DETERMINED TO BE DEFECTIVE IN MATERIAL AND WORKMANSHIP AND RETURNED TO ALL-FLO, SHIPPING COSTS PREPAID, WILL BE REPAIRED OR REPLACED AT ALL-FLO'S OPTION. CUSTOMER SHALL NOTIFY ALL-FLO IN WRITING WITHIN 30 DAYS OF ANY CLAIMED DEFECTS. NO MATERIALS CAN BE RETURNED WITHOUT THE PRIOR CONSENT OF ALL-FLO, AND IF APPROVED SHALL BE RETURNED TO ALL-FLO FREIGHT PREPAID. ALL-FLO'S LIABILITY FOR ANY BREACH OF THIS WARRANTY SHALL BE LIMITED TO EITHER REPLACEMENT OF THE MATERIALS OR, AT ALL-FLO'S SOLE OPTION, THE REFUND OF THE PURCHASE PRICE. ALL-FLO SHALL NOT BE HELD LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY BREACH OF THIS WARRANTY. THIS EXCLUSION APPLIES WHETHER SUCH DAMAGES WERE SOUGHT BASED ON BREACH OF WARRANTY, BREACH OF CONTRACT, NEGLIGENCE, STRICT LIABILITY IN TORT, OR ANY OTHER LEGAL THEORY. FURTHER, ALL-FLO SHALL NOT BE LIABLE FOR LOSSES, DELAYS, LABOR COSTS, OR ANY OTHER COST OR EXPENSE DIRECTLY OR INDIRECTLY ARISING FROM THE USE OF MATERIALS. ALL-FLO'S LIABILITY IS EXPRESSLY LIMITED TO THE REPLACEMENT OR REPAIR OF DEFECTIVE GOODS, OR THE TOTAL VALUE OF SUCH GOODS. THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, WHETHER EXPRESS, IMPLIED, OR ORAL INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY, ANY IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, AND ANY IMPLIED WARRANTIES OTHERWISE ARISING FROM A COURSE OF DEALING OR TRADE. All-Flo will not, in ANY event, be liable for any loss of profit, interruption of business or any other special, consequential or incidental damages suffered or sustained by Customer. All-Flo's total maximum liability to the customer in respect of sale of materials or services rendered by All-Flo is limited to the total monies received by All-Flo from the customer for the particular materials described in Customer's order.

All-Flo does not warrant any part or component that it does not manufacture, but will assign to the original end-user purchaser of any warranty received by it from the manufacturer, to extent such pass through is permitted by the manufacturer.

## REGISTRATION FORM

Pump Model \_\_\_\_\_ Pump Serial Number \_\_\_\_\_

Company Name \_\_\_\_\_

Name \_\_\_\_\_ Email \_\_\_\_\_

Phone # \_\_\_\_\_ City \_\_\_\_\_ State \_\_\_\_\_ Zip \_\_\_\_\_

Qty of Pumps \_\_\_\_\_ Fluid Pumping \_\_\_\_\_

How did you hear about us? Existing All-Flo user,  
Web, Distributor, Magazine...

\_\_\_\_\_

**MAIL TO:** All-Flo | Attn: Product Registration  
22069 Van Buren Street, Grand Terrace, CA 92313-5651



Scan QR code and  
complete form  
on mobile phone  
or visit

[www.all-flo.com/registration-form.html](http://www.all-flo.com/registration-form.html)





PSG

22069 Van Buren Street

Grand Terrace, CA 92313-5651 USA

P: +1 (440) 354-1700 F: +1 (440) 354-9466

[all-flo.com](http://all-flo.com)

All-Flo is committed to the pursuit of designing and manufacturing the highest quality product available to industry. Since the beginning in 1986, All-Flo engineers have used their extensive knowledge of today's engineered materials, advanced air system logic and manufacturing techniques to develop the superior group of lube-free, air-operated diaphragm pumps found in this catalog. Every pump is performance engineered and quality built to provide trouble-free service under the toughest conditions.



Where Innovation Flows